


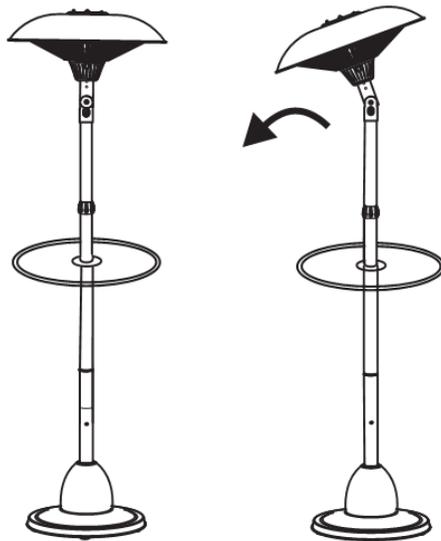

Instruction Manual

Electric Patio Heater

OL1786TBL - OL1786SET2



IMPORTANT INSTRUCTIONS

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor. (Should the heater be tilted or fall over the auto cut off switch will activate)

1. Site the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 metre).
2. Do not use in unventilated areas.
3. Do not use where gas, petrol, paint or other inflammable goods are stored.
4. Do not push any items through, obstruct or cover the grill of the heater head.
5. Do not leave turned on and unattended especially when children and or animals are in the vicinity.
6. The indication of the different positions of switches shall be visible from a distance of 1M.
7. The Marking concerning covering shall be visible after the heater has been installed. It shall not be placed on the back of portable heaters.
8. The unit must be securely placed on a horizontal and flat surface.
9. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
10. Don't place the unit closed to curtain and/or other flammable objects. Otherwise there will be a danger of catching fire.
11. Don't cover the unit with anything during operation or a short time after it's shut down.
12. Don't wrap the power supply cord on the unit.
13. The unit must be handled with care, and avoid vibration or hitting.

-
14. The unit must be securely grounded during operation.
 15. When assembling, keep clear from any board or flammable material.
 16. The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
 17. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
 18. Don't use this unit as a cloth drier or towel drier.
 19. Don't use this unit as a sauna heater.
 20. Don't use this unit in place of animal propagating and raising.
 21. Don't immerse this unit into water for cleaning.
 22. The unit should be plugged in a socket, which is easily visible and reachable.
 23. Two Dark points may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.
 24. Children of less than 3 years should be kept away unless continuously supervised.
Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
CAUTION — Some parts of this product can become very hot and cause burns.
Particular attention has to be given where children and vulnerable people are present.
 25. Don't use this unit as a room heater.
 26. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.

27. The unit must not be positioned under a socket.
28. When the power supply cord is damaged, it must be replaced by authorized agent or other professional people to avoid danger.
29. this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
30. children shall not play with the appliance
31. cleaning and user maintenance shall not be made by children without supervision

Assembling Process

Step 1: Fix the Bottom Pole to the base using 3pcs M6*50 bolts.




Step 2: Place the Decoration Cover onto the Bottom Pole.




Step 3: Connect the middle Pole with bottom pole by screwing them together.




Step 4: Push the Aluminum Table onto the Middle Pole.

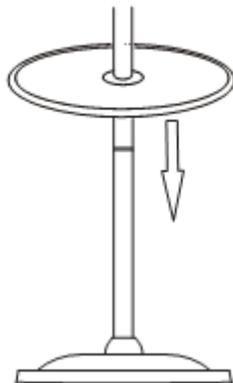

 Step 5: Place the power cord plug through base, bottom pole, middle pole, Connect the power cord plug to the socket in the heater head.




Step 6: Feed the power cord plug through the middle pole, push the heater head onto upper pole and secure using M4*8 screws.

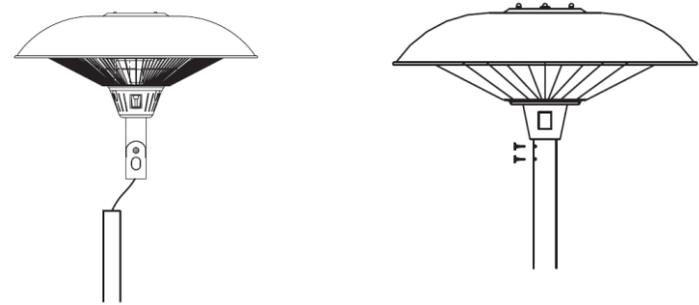

Step 7: Raise or retract the top pole to the desired height and tighten to the middle pole by screwing knob down.



Step 8 : Fix the Table on the Pole by screwing the plastic fixation Part.

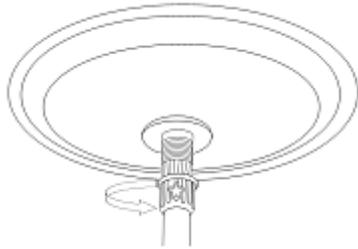

Step 9: Tighten the Plastic Fixation Part by screwing the Screw Knob.




Step 10: Connect the upper pole with middle pole by screwing them together.




Step 11: Secure the power cord to the weighted base.

Attach the power cord on the stainless steel base with four M4 x 12 screws.

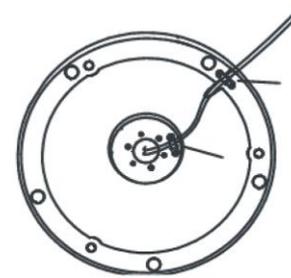

Step 12: Press the button to adjust heater head to desired angle.

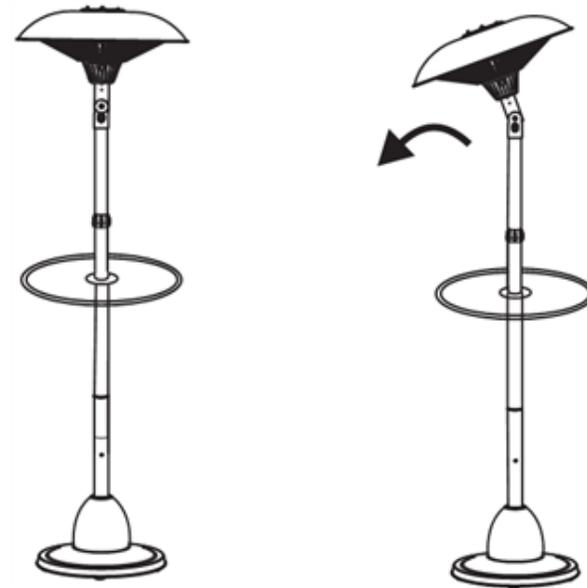

Complete!

Operation

Connect the power cable to a 13 amp supply that is located in a safe, dry area.

- The switch on the heater head is used to control the one heat setting. (I) for 900w, (II) for 1200W, (I&II) for 2100W.
The 0 position is off.
- Although the patio heater is shower proof, do not use when raining or in wet conditions.
- Always disconnect the power cable from the electrical supply, when the patio heater is not in use.

Technical specification

Voltage Rating	220-240V, 50Hz
Power Consumption	900W/1200W/2100W
Unit Size	58.5cm (W)×46cm(D)×208cm(H)
Unit Weight	15.4kg

MAINTENANCE

Unplug the unit and let it cool completely.

- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- Although this heater is outdoor approved, DO NOT immerse the heater in water for your safety.

Wait until the unit is completely dry before use.

STORAGE

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLE SHOOTING

If the heater will not operate, please check the following before seeking repair of service:

- Check if the power cord is plugged into an electrical outlet, if not plug in.
- Check if electricity to the main fuse is working.
- Make certain the power switches are turned on. If not, choose a setting.

WEEE



This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

For more information please contact your supplier:

Primrose

info@primrose.co.uk

Tel: 0118 9035210 (UK)

Tel: 0044 118 9035210 (outside of UK)